


# CD/DVD HOLDER PLANS


1. TABLE SAW - PUT ARROW AGAINST THE FENCE. CUT 2 PIECES.  
FINAL DIMENSIONS OF EACH PIECE IS 11 1/4" X 5 1/4"

**\*\*\*PUT NAME ON THE END GRAIN OF EACH PIECE\*\*\***

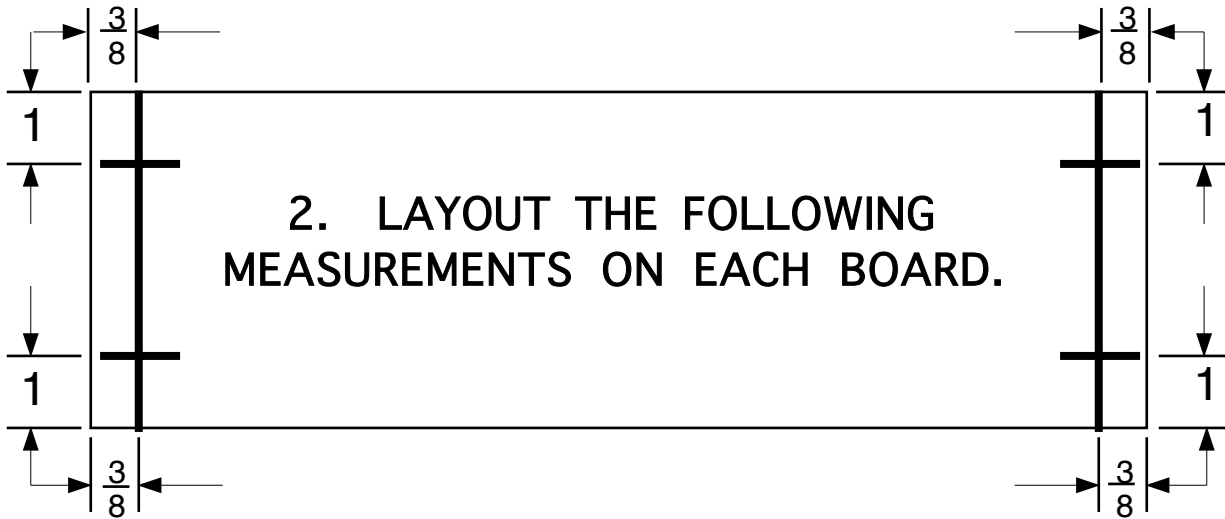

3. CENTER PUNCH WHERE THE 2 LINES CROSS AND SAND OFF ALL THE PENCIL MARKS ON BOTH SIDE PIECES. DO NOT SAND OFF NAME.  
4. DRILL 8 HOLES ON THE CENTER PUNCHES AT THE DRILL PRESS.  
5. LINE UP GRAIN AND BRING UP BOTH PIECES TO MR. KUHN AND FIND CENTER FOR YOU.

## LAYOUT THE FOLLOWING MEASUREMENTS

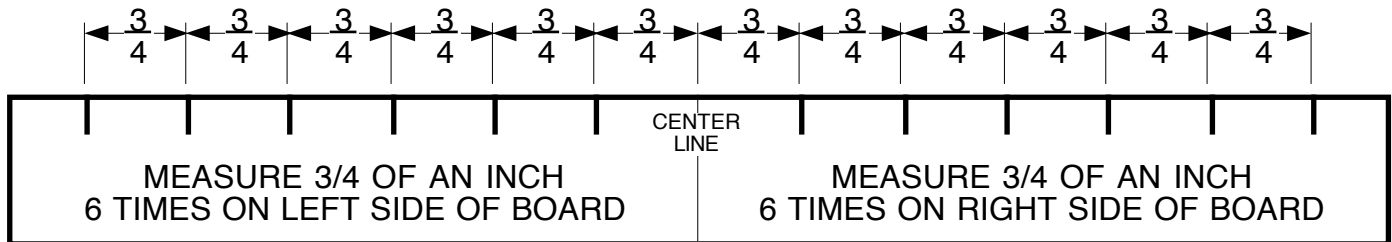


6. SEE KUHN TO CHECK TO SEE IF MEASUREMENTS ARE CORRECT, GET OTHER PIECE, THEN TRANSFER MEASUREMENTS, AND LEAVE ONE PIECE WITH MR. KUHN.  
7. **ROUTER AND JIG** - CUT THE DADO'S AS DEMONSTRATED.  
8. SAND OFF ALL PENCIL MARKS WITH 60 GRIT ON DADO SIDE.  
**\*\*\*REMEMBER TO SAND WITH THE GRAIN\*\***  
9. GET 220 GRIT AND SAND JUST THE DADO SIDE.  
10. RETURN 220 GRIT THEN STAIN JUST THE DADO SIDE OF PROJECT.  
11. SHOW KUHN STAINED SIDE TO GET OTHER PIECE THEN REPEAT STEPS 7 THROUGH 10.  
**\*\*\*SHOW MR. KUHN BOTH PIECES STAINED TO GET A PIECE OF MASONITE\*\*\***  
12. CUT 13 PIECES OF MASONITE WITH THE MITER GAUGE AT THE BANDSAW.  
**\*\*\*HAND IN LEFT OVER MASONITE TO GET TRACER PIECE\*\*\***  
13. TRACE PATTERN ONTO ONE CORNER OF EACH PIECE OF MASONITE, RETURN TRACER PIECE AND CUT AS DEMONSTRATED ON THE JIGSAW.  
14. THEN SAND EACH CUT AND EDGE SMOOTH WITH A **SANDING BOARD**.  
15. PUT EACH PIECE OF MASONITE INTO EACH DADO WITH GLUE AS DEMONSTRATED.

16. BRING UP COMPLETED SIDE WITH SHELVES TO GET OTHER PIECE OF MASONITE.
17. REPEAT STEPS 12 - 15.
18. BRING UP **PENCIL** TO GET TOP AND BOTTOM PIECES AND SAND THE SIDE THAT DOESN'T HAVE YOUR NAME WITH 220 GRIT.
19. HAND IN 220 GRIT AND ONLY STAIN THE SIDE YOU SANDED.  
**\*\*\*STAIN MUST DRY ONE DAY BEFORE GOING ONTO NEXT STEP\*\*\***
20. BRING UP TOP & BOTTOM PIECES STAINED TO GET NAILS.
21. FOLLOW THESE STEPS TO NAIL IN TOP & BOTTOM PIECES:
  1. **PUT GLUE ON "X" SIDE**
  2. **MAKE SURE THAT THE STAIN SIDE IS ON THE INSIDE.**
  3. **HAVE SOME ONE HELP WHILE YOU NAIL.**
  4. **NAIL ON OTHER SIDE MAKING SURE THE DADOS ARE ON THE SAME SIDES.**
  5. **PUT IN 2 WOODEN CLAMPS & LET DRY ONE DAY ON BACK TABLE**
22. SAND BACK EVEN WITH THE SANDING BOARD

**\*\*\*THE BACK IS THE SIDE THAT HAS THE DADO'S\*\*\***

22. USE A NAIL SET TO COUNTER SINK NAILS.
23. SHOW KUHN PROJECT TO GET A PIECE OF MASONITE AND LAY OUT THE FOLLOWING

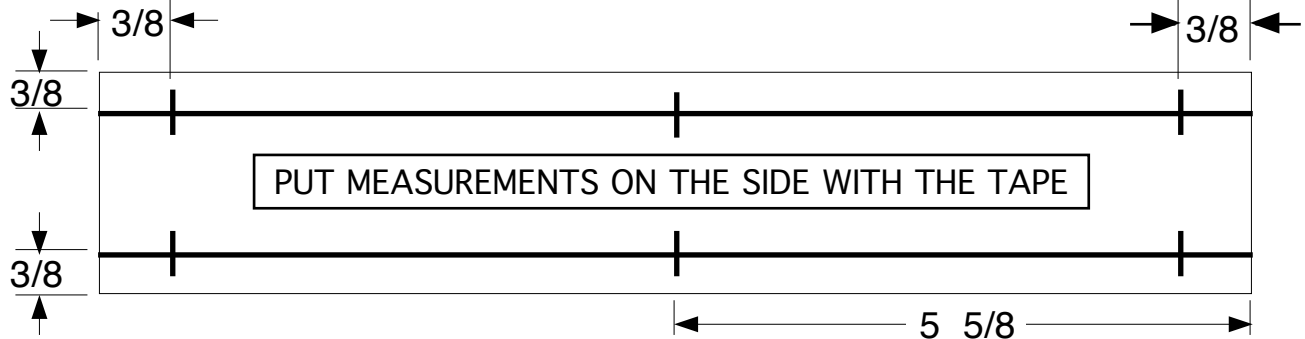

24. SHOW KUHN MASONITE TO CENTER PUNCH AND THEN DRILL.
25. BRING UP PLANS TO GET NAILS TO NAIL ON MASONITE. NAME SIDE IS ON INSIDE.  
**\*\*\*PUT GLUE ON BACK BEFORE NAILING ON MASONITE\*\*\***
26. PUT PUTTY IN THE COUNTER SUNK NAIL HOLES.
27. USING BABY RASP TO ROUND THE EDGES. THE DAY AFTER YOU NAIL ON THE BACK USE MOMMA RASP TO FILE THE MASONITE EVEN ON ALL SIDES.
28. USE **POWER SANDER** TO COMPLETE THE FOLLOWING:  
**SAND ALL SIDES EVEN, SAND OFF PENCIL MARKS, SAND OFF SCRATCHES MADE BY RASP, AND ROUND EDGES.      \*\*ASK KUHN FOR ADVICE\*\***
29. CLEAN UP MESS MADE WITH POWER SANDER TO GET 220 GRIT & SAND WITH 220 GRIT.
30. HAND IN 220 GRIT, BRUSH OUT SAW DUST FROM INSIDE OF CD HOLDER, PUT WOOD PUTTY IN ANY CRACKS
31. SAND OVER PUTTY WITH USED 60 GRIT AND A SANDING BLOCK.  
**DO NOT SAND WITH POWER SANDER AFTER USING PUTTY**
32. THEN ASK KUHN TO GET 600 GRIT FOR THE FINAL SANDING BEFORE STAINING PROJECT.
33. HAND IN 600 GRIT
34. USE A BRUSH TO GET CLEAN OUT SAW DUST FROM INSIDE PROJECT ONE LAST TIME.
35. STAIN JUST THE OUTSIDE OF PROJECT AND LET DRY 1 DAY IN CABINET.
36. COMPLETE EVALUATION SHEET.
37. HAND IN PROJECT & EVALUATION SHEET.